

INSTRUCTIONS

MSR1 REMOTE



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



Programming at the 1st Sensor	Buttons	LCD Screen	The Light
	Press button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press button to start programming.	The LCD screen starts to show all the sensor numbers at the right column	Light blinks then keeps ON for 5S then OFF if no motion or other commands
	Press button	The S icon at the left bottom corner blinks	Following the last step, light keeps ON or OFF
	Press the Detection Area button	The S icon and Detection Area icon blinks	Following the last step, light keeps ON or OFF
	Press the buttons to adjust the as <u>25%, 50%, 75% or 100%</u>	The S icon and Detection Area icon keep blinking, numbers changing	Light blinks at each press
	Press the Holdtime button	The S icon and Holdtime icon blinks	Light ON
	Press the buttons to adjust the as <u>5S, 30S, 1min, 3min, 5min, 10min, 20min or 30min</u>	The S icon and Holdtime icon keep blinking, numbers changing	Light blinks at each press
	Press the Standby Dimming button	The S icon and Standby Dimming icon blinks	Light ON
	Press the buttons to adjust the as <u>10%, 20%, 30% or 50%</u>	The S icon and Standby Dimming icon keep blinking, numbers changing	Light blinks at each press
	Press the Standby Period button	The S icon and Standby Period icon blinks	Light ON
	Press the buttons to adjust the as <u>0S, 10S, 30S, 1min, 5min, 10min, 30min, 60min, -(infinite+∞)</u>	The S icon and Standby Period icon keep blinking, numbers changing	Light blinks at each press
	Press the Daylight Threshold button	The S icon and Daylight Threshold icon blinks	Light ON
	Press the buttons to adjust the as <u>--- (Disable), 2lux, 10lux, 30lux, 50lux, 80lux, 120lux, 200lux, 250lux, 300lux, 350lux or 400lux</u>	The S icon and Daylight Threshold icon keep blinking, numbers changing	Light blinks at each press
	Press the button	The M icon (right next to S icon) blinks	Light ON
	Press the Daylight Threshold button	All icons settle	Light performs the saved program

INSTRUCTIONS

MSR1 REMOTE CONTROL



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

	Buttons	LCD Screen	The Light
Applying to all the other Sensors	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press  button to start programming	The LCD screen starts to show all the sensor numbers at the right column	Light blinks then keeps ON for 5S then OFF if no motion or other commands
	Press the  button	All icons settle	Light performs the saved program
Manually Dimming in ON/OFF Mode	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press   buttons to adjust output accordingly	Percent number on the left column changes along	Light performs output change
Manually Dimming in Sensor Mode	Press  button to turn ON the light	The LCD screen starts to have numbers showing.	Light ON
	Press  button	The PW icon blinks	Light blinks
	Press   buttons to adjust output accordingly	Percent number on the left column changes along	Light performs output change

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



© 2022 RAB LIGHTING Inc.

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request